

# JetStor<sup>®</sup>

Storage. Solutions. Support.


## How to Remove and Check the Master Expander Module



**CAUTION:** Be careful when inserting the Expander Module. Carefully insert the module and make sure that the connector pins are not bent when the module is inserted.

**NOTE:** Expander Modules are not hot-swappable. The subsystem must be in a powered-off state before the Expander Module is removed.

- A. Remove the top cover.
- B. Remove HDDs on the columns/slots near the Master Expander Module.

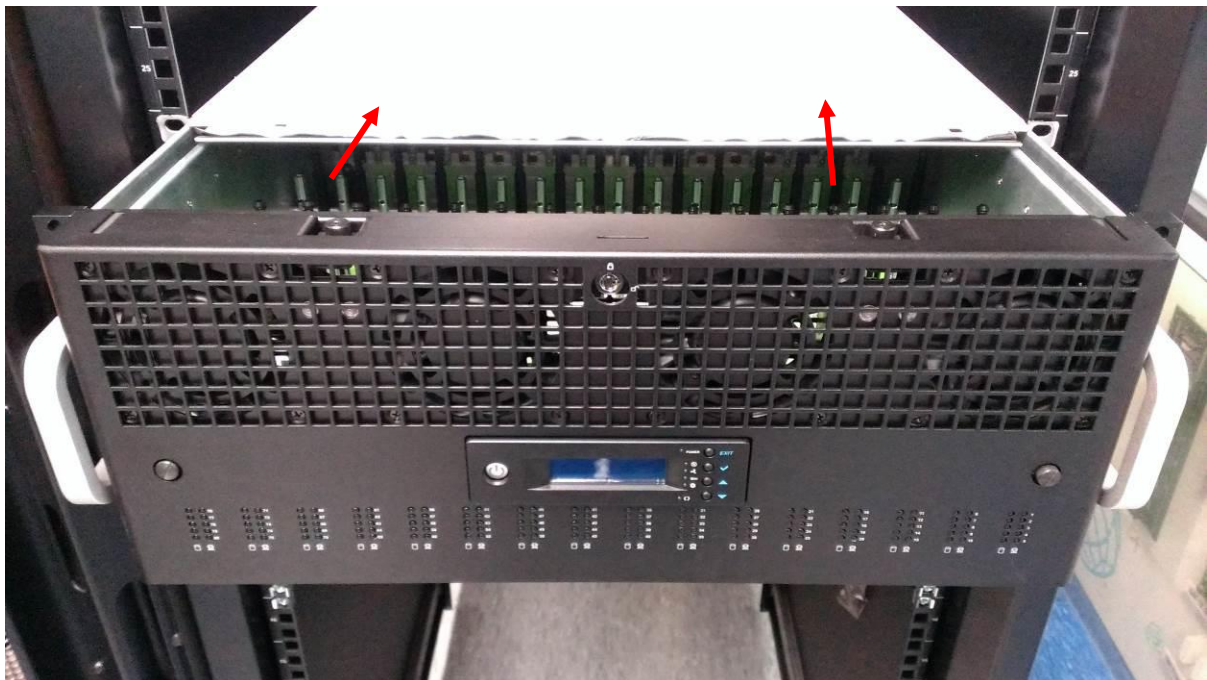

C. Loosen the two thumbscrews from the Master Expander Module.



D. Carefully remove the Master Expander Module.







E. Check the Master Expander Module's pin connectors. Make sure there are no bent pins.



F. Carefully reinsert the Master Expander Module. Close the 2 locking levers and push the Master Expander module downwards.

G. Make sure the Master Expander Module is well connected to the 2 bottom boards. Tighten the two thumbscrews of Master Expander Module.



H. Reinsert the HDDs that were removed. Put the top cover back on.