

JetStor[®]


Storage. Solutions. Support.

JetStor X Series Quick Installation Guide


1 INSTALL THE RAIL KIT

CAUTION:
The populated JetStor SAN system can be very heavy, to avoid any potential injury or harm to installers, or damage to the system, we strongly recommend at least two certified operators or engineers perform the system installation.


1 Pull the inner rail out and slide the intermediate member back.

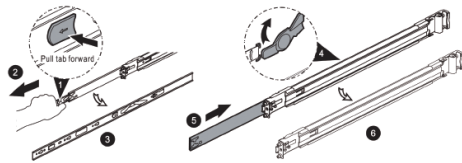

2 Install the inner rail onto the chassis.

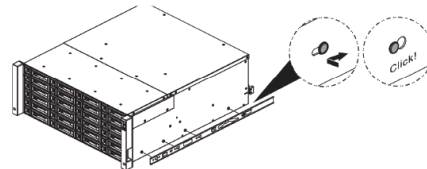


3 Install the outer rail / bracket assembly to the frame.

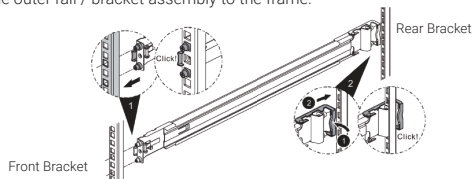

4 Insert the chassis to complete the installation.

Step 1. Pull the middle rail fully extended in locked position.
Step 2. Ensure ball bearing retainer is located at the front of the middle rail.
Step 3. Insert chassis into middle-outer rail.
Step 4. When hit the stop, pull / push release tab to unlock and retract chassis into rack.
Step 5. Use M5x20 screws to fasten the chassis ear.

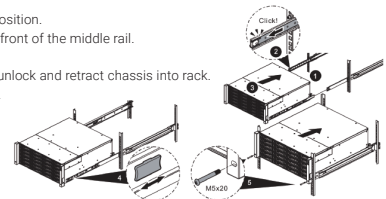

Note : Please repeat the installation steps for the other side.

2 POWER ON THE STORAGE SYSTEM


Connect the Power Cables

1. Connect power cables from each power supply module to a power source.
2. Make sure to secure the power cables the power supply modules so they can not be pulled out accidentally.

Power on the System Components

1. Power on any network switches, routers, or other standalone components.
2. Power on any expansion enclosures that might be a part of the system.
3. Power on the JetStor system by turning on the power button on the front of the system.


TIP:
Please wait for the controller status LED to turn green on the rear of the chassis before attempting to discover or manage the storage system. It may take a few minutes to boot the JetStor system.

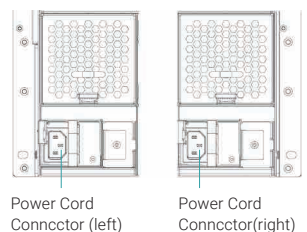

Power Cord Connector (left)

Power Cord Connector(right)

4. See the diagram below to determine the meaning of the lights and indicators on the front of the system.

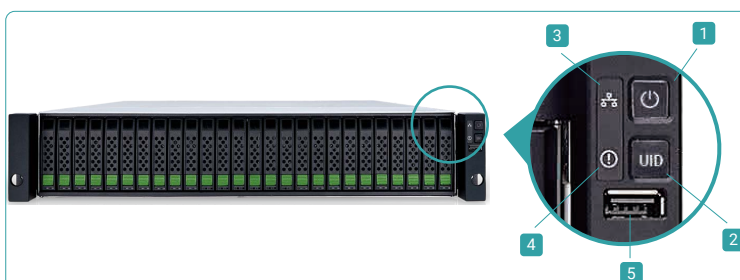

1. System Power Button / LED
2. UID (Unique Identifier) Button / LED
3. System Access LED

4. System Status LED
5. USB Port

3 DISCOVER AND SETUP THE SYSTEM


Initial Setup

The Initial configuration wizard will guide the first time user to initialize and setup the system quickly.

Step 1

To access the JetStor web interface, you have to enter a username and password. The initial defaults for the administrator login are:

- Username: admin
- Password: 00000000

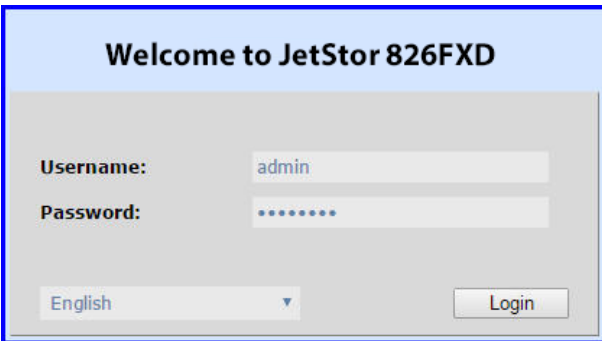

Step 2

- Enter a System Name.
- Change Admin Password.
- Set the local Date and Time. Date and time can be set by manually or synchronized with a NTP (Network Time Protocol) server.
- Select a Time Zone depending on your location.
- Click the Next button to proceed.




Step 3

- Confirm or change the management port IP address and DNS server.
- Some notification services require DNS settings.
- Click the Next button to proceed.



Step 4

Verify all items, and then click the Finish button to complete the initial configuration. You have to login with the new IP address of the management port and new admin password next time.

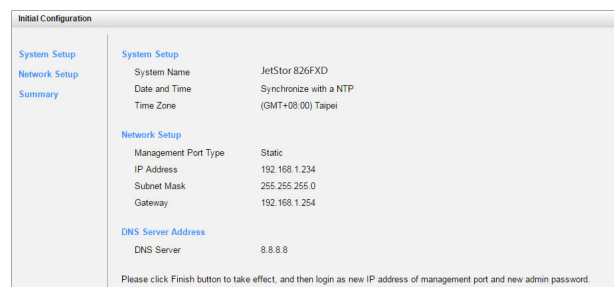

Host Configuration and Storage Management

After initial setup, the next step is to configure the specific storage settings for your requirement. For more information about managing the storage, please refer to the JetStor X Series User's Manual.

TIP: If the LAN doesn't have a DHCP server, the management port will be assigned a fix IP address: 169.254.1.234/16. So you can configure the IP address of your management computer to the same subnet domain of the storage system, e.g.: 169.254.1.1/16. Then open a browser and enter <http://169.254.1.234> to go into the login page.

7 GETTING TECHNICAL SUPPORT

Please follow the troubleshooting tips in the JetStor X series Hardware Owner's Manual or the User's Manual to diagnose and resolve common problems during initial setup and configuration. If you are still encountering trouble, please contact JetStor technical support for help using one of the options below.

- Via the Web: <http://www.acnc.com/support>
- Via Telephone: 1-800-213-2667
- Via Skype Chat, Skype ID: jetstor.support
- Via Email: support@acnc.com

JetStor[®]
Storage. Solutions. Support.